#### REGULATORY COMPLIANCE

Rollease Acmeda declares this equipment is in compliance with the essential requirements and other relevant provisions of the following directives:

2014/35/EU	The Low Voltage Directive		
2014/30/EU	The Electromagnetic Compatibility Directive		
2014/53/EU	The Radio Equipment Directive		

#### STATEMENT REGARDING ECC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

[2] This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.









# **ARC REPEATER**

## QUICK START GUIDE



Plug USB power adapter into a power outlet.





Only use Rollease Acmeda USB power adapters with ARC Repeater. Using other power adapters/power sources may adversely affect ARC Repeater performance and should be avoided.



Plug the ARC Repeater into the USB power adapter. A blue LED on the ARC Repeater will be visible when the power is switched on.



#### NOTE

ARC Repeater is plug and play. No setup required.



Press any button on a Rollease Acmeda remote control. The blue light on the ARC Repeater will flash 3 times. This means the ARC Repeater is transmitting the signal.





LEDILIGHT



Maximum of 2 ARC Repeaters can be used in one project Don't cover the ARC Repeater with a metal shield

 






#### INSTALLATION RANGE

The Rollease Acmeda ARC Repeater can extend the RF range of operation for ARC-enabled products by up to 40m (131ft).



NOTE: RF source can be PULSE or any ARC Remote Control or Sensor.

#### **ROLLEASE ACMEDA USB POWER ADAPTERS**


REGION	AU		EU	UK	US	
PART	MTPS-USB5-1000AU	MT03-0301-069009	MTPS-USB5-100EU	MT03-0301-050002	MTPS-USB-BK	MT03-0301-069008
			8 B			
		UTEMATE				Unaware

#### LED LIGHT INDICATION

LED	STATUS	
On	Power On	
Flashes x 3	Transmitting a remote control, motor or sensor RF433 MHz signal	
Flashes x 1	Flashes x 1 Transmitting a Pulse hub RF433 MHz signal	

### **SPECIFICATIONS**

INTERFACE	USB		
WORKING VOLTAGE	5±0.2 V DC		
POWER SUPPLY	USB POWER ADAPTER		
RADIO FREQUENCY	433.92MHZ		
RADIO DISTANCE OF	40m		
OPERATION	131.23ft		
RECEIVER SENSITIVITY	≽ -65 dB		
TRANSMITTER POWER	3 ~ 3.5 dBm		
RF PROTOCOL	ARC		
RF MODULATION	FSK		
SAFETY CERTIFICATION	TUV		
RF CERTIFICATION	RTTE		
ENVIRONMENTAL CERTIFICATION	ROHS		
ELECTROSTATIC DISCHARGE	4KV (Contact discharge) 8KV (Air discharge)		

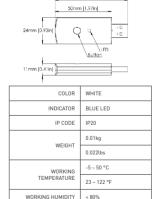

-10 ~ 65 °C

14 ~ 149 °F

STORAGE TEMPERATURE

64mm [0.91in]